

**VonHaus**



Easy to empty



Operates as a  
handheld

# STICK VACUUM

07/200 US

Instruction Manual



# WARNING



**PLEASE READ THESE INSTRUCTIONS CAREFULLY, AND KEEP FOR FUTURE REFERENCE**

**WARNING - To reduce the risk of fire, electric shock or injury:**

The VonHaus Stick Vacuum is intended for domestic use only. It is not intended for use in commercial or industrial environments and is not suitable for use outdoors or on wet surfaces.

Use only as described in this manual.

Use only Designer Habitat recommended attachments.

Do not allow to be used as a toy. Close attention is necessary when used near children.

Do not use with damaged cable or plug. If the supply cable is damaged, it must be replaced by a qualified engineer or Designer Habitat authorised service agent in order to avoid a hazard.

If the appliance is not functioning properly, has been dropped, damaged, left outdoors or immersed in liquid, do not use, contact Designer Habitat Customer Services.

Do not use the appliance if any parts appear to be faulty, missing or damaged.

Ensure all parts are securely attached before using the appliance.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use, and before performing user maintenance, connecting or disconnecting attachments or changing accessories.

Check to ensure your electricity supply matches that shown on the rating plate. The appliance must only be used as rated. Preferably the socket outlet should be protected by a Residual Current Device (RCD).

Do not handle the plug or the appliance with wet hands.

Do not unplug by pulling on cable. To unplug, grasp the plug, not the cable.

Do not pull cable around sharp edges or corners.

Keep cord away from heated surfaces.

Do not run the vacuum cleaner over the cord

The use of an extension cable is not recommended.

Do not use the appliance to pick up liquid spills, flammable or combustible liquids such as gasoline.

Do not use the appliance in areas where flammable or combustible liquids may be present.

Do not use the appliance to pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.

Never use the appliance without ALL filters in place.

Do not put any objects into openings or cover the appliance.

Take extra care when operating on stairs.

Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.

Do not carry out any maintenance or repair work other than that shown in this manual, or as advised by the Designer Habitat Customer Care Helpline.

Cleaning and user maintenance shall not be undertaken by children.

When using this appliance for the first time, a smell or vapour may be given off. This will dissipate after a few uses.

Store appliance indoors, in a cool, dry place.

**Failure to follow these instructions will invalidate any guarantee.**

## PRODUCT SPECIFICATION

1 Upright Handle

2 Telescopic Pole

3 Telescopic Pole  
EXTEND Switch

4 Shoulder Strap Clips

5 Telescopic Pole  
RELEASE Switch

6 Handheld Carrying Handle

7 ON/OFF Switch


8 Dust Container  
Release Switch

9 Dust Container

10 HEPA Filter System

11 Air Intake Duct

12 Floor Nozzle  
(interchangeable)

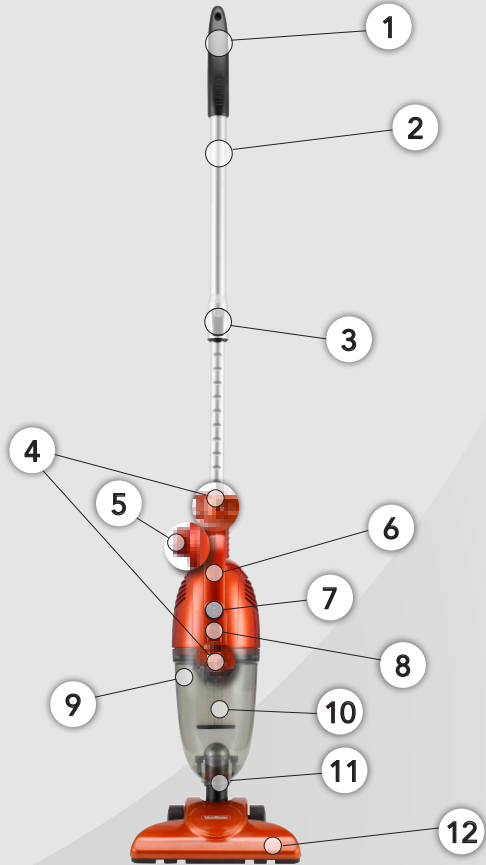

## TECHNICAL SPECIFICATION

VOLTAGE

110-120V

FREQUENCY

60Hz

POWER  
(MAX)

1000W

DUST  
CAPACITY (MAX)

1.3ltr

CORD  
LENGTH  
(MAX)

6m

SUCTION

>130W

FILTRATION

HEPA



Hose

HEPA Filter


Shoulder Strap

Crevice Nozzel


Upholstery Brush

## ASSEMBLY

### UPRIGHT

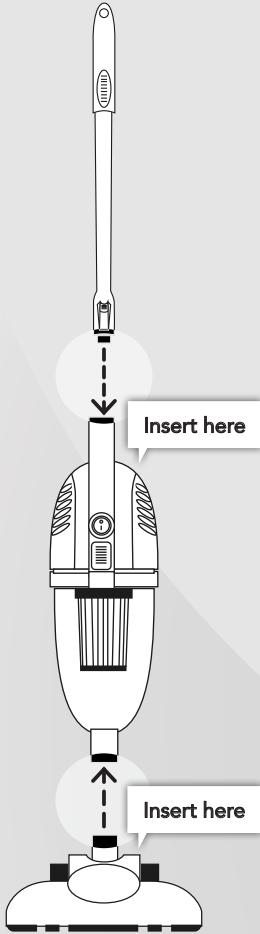


### HANDHELD

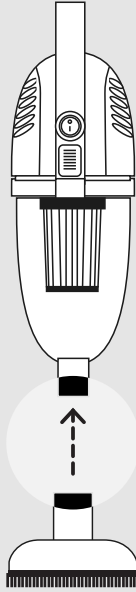


Attach **Upholstery Brush** by inserting into the **Air Intake Duct** on **Handheld Vacuum Unit**

To remove, pull apart gently.

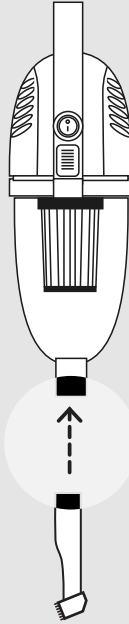

Attach the **Crevice Nozzle** by inserting into the **Air Intake Duct** on **Handheld Vacuum Unit**

To remove, pull apart gently.

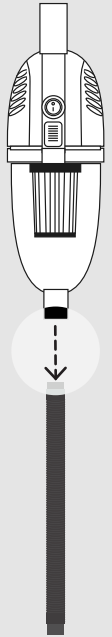

Attach the **Hose** by inserting into the **Air Intake Duct** on **Handheld Vacuum Unit**

To remove, pull apart gently.

## OPERATION

### BEFORE USE

Assemble as required.

Remove any objects from the floor that could potentially be sucked up by the vacuum and cause internal damage.

Roll out a sufficient length of **power cord** and plug into a mains socket.

Plug the **800W** appliance in to a **110 volt** AC electric outlet.

Switch the appliance ON using the **ON/OFF Switch** located on the **Handheld Vacuum** unit.

## MAINTENANCE & CLEANING

**Caution: Before carrying out maintenance, turn off the appliance and disconnect power plug.**

### DUST CONTAINER

We recommend the **Dust Container** is emptied after every use in order to maintain optimum performance.

Switch OFF the vacuum cleaner with the **ON/OFF Switch** and disconnect the plug from the mains.

Release the **Dust Container** by pressing the **Release Button**.  
*Ensure you are holding the Dust Container when you press the Release Button as it will detach from the main unit.*

Empty the waste in the **Dust Container** into a waste basket, tap to remove all contents.

Replace the **Dust Container**.

### FILTRATION SYSTEM

Switch OFF the vacuum cleaner with the **ON/OFF Switch** and disconnect the plug from the mains.

Release the **Dust Container** by pressing the **Release Button**.

Remove the **HEPA Filter** by pulling the rubber tab labelled "PULL"

Unfasten the velcro strip to remove the **Protective Mesh Filter** wrapped around the **HEPA Filter**.

Rinse both parts under cold, running water and allow to dry completely.

Wrap the **Protective Mesh Filter** around the **HEPA Filter** and use the velcro strip to secure.

Insert the Filters back in to the **Dust Container**.

Replace the **Dust Container**.

## TROUBLESHOOTING

**Caution: Before starting troubleshooting, stop the appliance and disconnect the power plug.**

Problem...	Cause...	Solution...
Vacuum will not start	Loose Power Cord	Remove plug from mains and re-insert
Loss of suction	Blockage	Check openings for any obstructions and remove
	Dust Container is too full	Remove and empty the Dust Container ( <i>see page 5</i> )
	Missing/damaged filter	Replace the filter ( <i>see page 5</i> )

## Disposal Information

Please recycle where facilities exist. Check with your local authority for recycling advice.

## Warranty

This new VonHaus product has a warranty period of 12 months beginning at the date of purchase. Please retain a proof of purchase receipt or statement as proof of the purchase date. The warranty only applies if the product is solely used in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately. Any abuse of the product or the manner which it is used will invalidate the warranty.

Returned goods will not be accepted unless re-packaged in its original colour box, and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

## Copyright

All material in this instruction manual are copyrighted by Designer Habitat Ltd. Any unauthorised use may violate worldwide copyright, trademark, and other laws.



# VonHaus

## STICK VACUUM

07/200

**VonHaus** is a registered trademark of Designer Habitat Ltd  
Made in China for Designer Habitat Ltd BL2 2HH  
[www.VonHaus.com](http://www.VonHaus.com)